



URC105 UNIVERSAL TELEVISION REMOTE



INSTRUCTION MANUAL

Please save for future reference

INTRODUCTION

Thank you for your purchase of the URC105 Universal Remote Control.

This remote allows you to replace a lost or broken TV remote.

This remote control operates common features of most models and brands of IR infrared controlled televisions.

In order to maintain compatibility with the greatest number of original remotes, certain functions present on your original remote may not be available with the URC105.

Please use this manual to become familiar with the operations of the URC105. It is recommended that you save this manual for future reference or for re-programming remote to work with a different device.

BATTERY INSTALLATION

Your URC105 universal remote requires two new AAA alkaline batteries to operate. To install batteries:


1. Remove screw from battery cover on back of remote. Push down on tab and lift cover off.
2. Match the batteries to the "+" and "-" marks inside the battery case and insert batteries.
3. Press battery cover back into place and replace screw.

Battery Saver-Your remote will automatically "time out" if keys are depressed for more than two minutes. This will save your batteries should your remote get stuck in a place where the keys remain depressed (e.g., between the sofa cushions, etc.)

Code Saver-You will have 90 seconds to change the batteries in the remote without losing the codes you have programmed. However, **do not** press any keys while changing batteries. If any button is pressed without batteries in the remote, all codes will be lost.

BUTTON FUNCTIONS

Some buttons on your remote control may have functions that are referred to by different names on the original device. For example, "PREV CH" may be called "Flashback" or "ENTER" may be called "Display". These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your device. For example, your TV must be equipped with Previous Channel function for the "PREV CH" button to operate this feature.

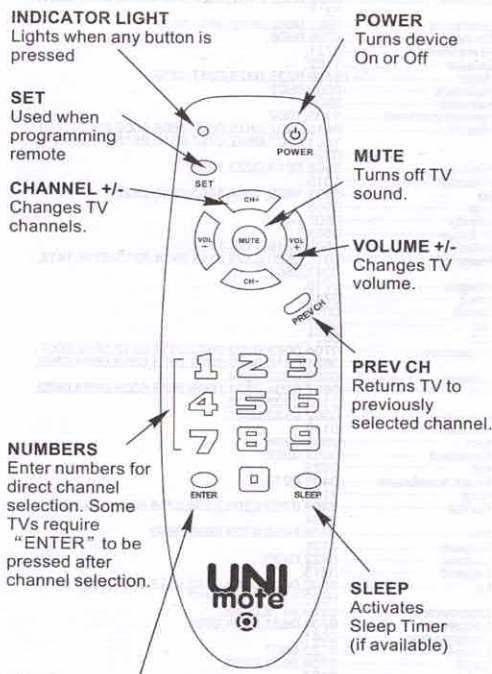

PROGRAMMING YOUR REMOTE

Using the Code Library

1. Manually turn on the TV.
2. Press and hold the "SET" button until the Indicator Light stays lit, then release "SET" button.
3. Find the four digit code for your brand of TV in the Code List (see back of these instructions). Enter the code using the Number keys. After your code is entered, the Indicator Light will turn off. Note: If the Indicator Light blinked twice and then stays lit after you entered the code, you may have entered an invalid code. Recheck the code list and try again.
4. With your TV turned on, press Channel Up button. If the TV responds, no further programming is required. Note: If some buttons do not function correctly with your equipment, try one of the other codes listed for your brand.
5. Enter your code here for future reference.

Using the Auto Search function

If the code for your TV is not listed, try the following to find the code for your device.

1. Manually turn on the TV.
2. Press and hold the "SET" button until the Indicator Light stays lit, then release "SET" button.
3. Press and release the "POWER" button until the device shuts off.
4. Press "ENTER" to complete setup and lock in your code.
5. With your TV on, press one of the button. If the TV responds, no further programming is required.

Using the Manual Search function

1. Manually turn on the TV.
2. Press and hold the "SET" button until the Indicator Light stays lit, then release "SET" button.
3. Press the "CH+" (or "CH-") button and release it.
4. Repeat to step 3 until the device shuts off
5. Press "ENTER" button to complete set up and lock in your code.



TV REMOTE CODE LIST

Abex 0120
 Admiral 0603, 0224, 0701,
 Advent 0213, 0219, 0893,
 Adventura 0019,
 Aiko 0407,
 Aiwa 0121, 0221, 0324, 0528,
 Alleron 0706,
 Amark 0603,
 Amfron 0906,
 Akai 0112, 0801, 0309, 1315, 1415, 0027, 1112,
 1912, 1515,
 Anam National 0906, 0901, 0104, 0805, 0920,
 Aoc 0002, 0102, 0502, 1502, 0003, 0217, 0119,
 0320,
 Apex 0026, 0223, 0123, 1814, 0741,
 Archer 0603,
 Aspect 0507,
 Audiovox 0906, 1503, 1313,
 Axion 0319, 0793,
 Bang & Olufsen 0620,
 Belscor 0002,
 Bell & Howell 0704, 0506, 0601, 0701,
 Benq 0709, 0909, 0711, 1616,
 Bluesky 1117, 0016,
 Bradford 0906,
 Broksonic 0316, 0115, 0626, 0327, 0632, 0041,
 Brookwood 0002,
 Candle 0002, 0502, 0019, 0402,
 Capehart 0119,
 Cce 1916,
 Celera 0023,
 Celebrity 0801,
 Centrios 0518,
 Centurion 0502,
 Cetronic 0805,
 Changhong 0023, 0741,
 Chinal 0407, 0016,
 Citizen 0701, 0402, 0805, 0407,
 Clairtone 0003,
 Classic 0023, 0741, 0805,
 Clix 0010,
 Clip Classic 0022, 0005, 0007,
 Coby 1710, 1014,
 Color Voice 0602,
 Colortyme 0002, 0502, 0602,
 Concerto 0002, 0502,
 Concierge 0713,
 Contec 0906, 0802, 0003, 0805,
 Cornea 0606,
 Craig 0906, 0805,
 Crosley 0807,
 Crown 0906, 0805,
 Curtis Mathes 0704, 0112, 0614, 0002, 0502, 0601, 0506,
 0512, 0437, 0701, 0103,
 Ctx 0603,
 Cxc 0906, 0805,
 Cybervision 0016,
 Daewoo 0611, 0002, 0502, 0611, 0102, 0415, 0905,
 0615, 0505, 0826, 0529, 0046, 0609, 0805,
 0407, 0303, 0602, 0214, 0403, 0314, 0503,
 Daytron 0002, 0502,
 Dell 0522, 0404, 0814,
 Diamond Vision 0622, 0496, 0810,
 Digitmate 1303,
 Digistar 1503, 0118, 0413, 0213, 0318, 0814, 1603,
 1716, 1816,
 Dimensia 0704, 0601,
 Disney 0417, 0115,
 Dukane 0507, 0808,
 Dumont 0713, 0002,
 Durabrand 0520, 0115, 0916, 0126, 0447, 0323, 0317,
 1115,
 Dynasty 0805,
 Elektra 0701,
 Electroband 0801, 0003,

Electrohome 0002, 0502, 0027, 0901, 0803,
 Elite video 0321,
 Emerson 0002, 0502, 0006, 0115, 0506, 0706, 0520, 0906,
 0316, 0505, 0614, 0622, 0324, 0924, 0626, 0826,
 0027, 0327, 0128, 0228, 0305, 0063, 0134, 0247,
 0605, 0705, 0805, 0703, 0090, 0004, 0519, 0106,
 0104, 0304, 0604, 0804, 0005, 0105,
 Envision 0002, 0502, 0009, 1502,
 Esa 0520,
 Fisher 0506, 0612, 0428, 0619, 0802,
 Fujitsu 0321, 0706, 1202,
 Funai 0706, 0520, 0906, 0324, 0247, 0805,
 Futaretec 0906, 0805,
 Gateway 0206,
 Ge 0704, 0312, 0018, 0002, 0502, 0006, 0007, 0601,
 0835, 0901, 0114, 0103, 0803, 0806, 0310,
 Gibraltar 0713, 0002,
 Goldstar 0002, 0502, 0102, 0324, 0435, 0802, 0307, 0609,
 0217,
 Gradiente 1902, 0002, 0916, 1617, 1517,
 Grundy 0706, 0906,
 Guestvision 0721,
 Gvision 1102,
 Haier 0709, 0223, 0323, 0317, 1316,
 Hallmark 0002, 0502,
 Harvard 0906,
 Hewlett packard 1103, 1002,
 Hitachi 0410, 0507, 0815, 0607, 0808, 0002, 0502, 0710,
 0316, 0701, 0802, 0707, 0315, 0515, 0715, 0519,
 0324,
 Hisense 0908, 0819, 0223, 1203,
 Hyundai 1015,
 Ilo 0421, 1608, 1004, 1903, 0216, 0520,
 Ima 0906,
 Infinity 0607, 0430,
 In focus 0601,
 Initial 1608, 0216, 1110, 1512,
 Insignia 0911, 0520, 0323, 0115, 0914, 0213, 0318, 1416,
 0247, 0504,
 Integra 0719,
 Inteq 0713,
 Janel 0019,
 Jbl 0807,
 Jcb 0801,
 Jc penney 0704, 0002, 0102, 0502, 0112, 0312, 0512, 0007,
 0601, 0310, 0402, 0802, 0103, 0803, 0604, 0806,
 0002, 0502, 0914,
 Jensen 0807, 0204, 0321, 0508, 0617, 0326, 0993, 0802,
 0108, 0308, 0715,
 Jvc 0002, 0502, 0801,
 Kawasho 0119,
 Kaypani 0805, 0906,
 Kcc 0002, 0502,
 Kenwood 0002, 0502,
 Kih 0023,
 Kloss novabeam 0408, 0019,
 Kogi 1102,
 Konika 0906, 0702, 0203, 0306, 0208, 0911, 0842, 0942,
 0504,
 Ktv 0906, 0003, 0703, 0805, 0608,
 Kurazai 0701,
 Lasonic 0622, 0496,
 Legend 0213,
 Lg 0802, 0606, 0502, 0102, 0117, 0814, 0324, 0435,
 0802, 0307, 0609, 0217,
 Liquidvideo 0319, 0418, 0793,
 Lodgenet 0704, 0821, 0601, 0701,
 Lodging star 2041,
 Loewe 0722, 0807,
 Logik 0704, 0601, 0701,
 Luce 0107,
 Luxman 0002, 0502,
 Lxi 0704, 0002, 0502, 0506, 0807, 0312, 0512, 0601,
 0324, 0103,
 Magnasonic 0706,
 Magnavox 0807, 0002, 0502, 0919, 1914, 0224, 0430, 0247,
 0402, 0408, 0109, 0715,
 Majestic 0704, 0601, 0701,
 Marantz 0807, 0719, 0002, 0502,

Maxent 0206,
 Medion 0922, 0421, 0417,
 Megatron 0002, 0502, 0507,
 Mei 0003,
 Memorex 0002, 0502, 0506, 0706, 0115, 0704, 0601, 1302,
 0428, 0632, 0701,
 Mga 0002, 0102, 0502, 0706, 0802, 0803, 0715, 0619,
 Midland 0704, 0713, 0007, 0312, 0103,
 Mintek 0216,
 Minutz 0806,
 Mitsubishi 0102, 0716, 0706, 0002, 0502, 0027, 0803, 0715,
 0619,
 Monivision 0205,
 Montgomery ward 0704, 0701, 0601,
 Moteva 0506, 1902,
 Motorola 0603, 0901,
 Mtc 0002, 0102, 0502, 0112, 0512, 0003,
 Multitech 0906,
 Multivision 0010,
 Myron & davis 0822,
 Nad 0002, 0502, 0512, 0120,
 Nec 0719, 0002, 0102, 0502, 0901, 0602, 0111, 0715,
 2142,
 Nettv 0206, 0014,
 Nextech 1806, 0318,
 Nikei 0805,
 Nikko 0002, 0502, 0407,
 Niko 1915,
 Norcent 0223, 0905, 0207,
 Ntc 0407,
 Olevia 1304, 1802, 1615, 1815, 1217,
 Oncommand 0721,
 Onking 0805,
 Onwa 0906, 0805,
 Optimus 0618, 0120, 0039, 0739,
 Optoma 1404,
 Optonica 0603, 0111,
 Orion 0713, 0115, 0105,
 Panasonic 0718, 0416, 0007, 0618, 0807, 0039, 0739, 0345,
 0606, 0901, 0608,
 Philco 0807, 0002, 0102, 0502, 0919, 0702, 1417, 0408,
 0109, 0715, 0901, 0402,
 Philips 0807, 0022, 0020, 0422, 0122, 0222, 0322, 0002,
 0520, 0919, 0521, 0621, 0709, 1516, 1017, 0430,
 0247, 0901, 0402, 0408, 0109, 0210, 0310, 0715,
 2042,
 Philips-magnavox 0807, 0022, 0322, 0919, 0224, 0430,
 Pilot 0002,
 Pioneer 0120, 0719, 0808, 0002, 0502, 0610, 0519,
 Piva 1109,
 Planar 1302,
 Polaroid 0819, 0918, 0914, 1503, 1215, 0504,
 Portland 0002, 0102, 0502, 0415, 0614,
 Precision 0218,
 Price club 0112,
 Prima 1503, 0118, 0213, 0318, 0219,
 Princeton graphics 0603, 0511,
 Prism 0713, 0004,
 Proscan 0704, 0312, 0103, 0601, 0817, 0917,
 Proton 0820, 0002, 0502, 1602, 0910, 0119, 0220,
 Protron 1303, 1317,
 Proview 1104, 1204, 1304,
 Pulsar 0713, 0004,
 Quasar 0718, 0416, 0007, 0618, 0807, 0039, 0739, 0901,
 0608,
 Radio shack 0704, 0002, 0406, 0506, 0906, 0618, 0502, 0324,
 0835, 0601, 0802, 0705, 0805, 0111,
 Rca 0704, 0002, 0406, 0007, 0011, 0611, 0811, 0312,
 0514, 0720, 0102, 0502, 0601, 0817, 0917, 0835,
 0901, 0103, 0803, 0211, 0912, 0114, 0519, 0320,
 0420,
 Realistic 0704, 0002, 0406, 0506, 0906, 0618, 0502, 0601,
 0324, 0802, 0705, 0805, 0111,
 0003,
 Rhapsody 0713, 0719, 0712,
 Runco 0017,
 Sampo 0014, 0206, 0002, 0502, 0119, 0802,
 Samsung 0112, 0309, 0209, 0512, 0302, 0502, 0002, 0102,
 0110, 0818, 0895, 0437, 0802, 0103, 0609, 0012,
 0212,

Samsux 0502,
 Samtron 0112,
 Sansui 0115, 0632,
 Santeca 0021,
 Sanyo 0506, 0311, 0612, 0002, 0428, 0802, 0412, 0619,
 Sceptre 0516, 1814,
 Scotch 0002, 0502,
 Scott 0002, 0502, 0706, 0906, 0004, 0105, 0805,
 Sears 0704, 0807, 0506, 0706, 0112, 0002, 0502, 0312,
 0512, 0612, 0520, 0601, 0812, 0509, 0041, 0247,
 0802, 0103, 0619,
 Selectron 1803, 1603, 1703,
 Semp 1701,
 Sharp 0509, 0913, 0907, 0603, 0002, 0502, 0224, 0228,
 0202, 0111, 0813,
 Shogun 0002,
 Signature 0704, 0601, 0701, 0903,
 Simpson 0402,
 Sonic 0003,
 Sony 0414, 0902, 0801, 0708, 0639, 0816,
 Sova 0521,
 Soyo 1614, 1714,
 Soundesign 0002, 0502, 0706, 0906, 0402, 0805,
 Spectra 0622,
 Spectravision 0921,
 Squareview 0521,
 Sas 0002, 0906, 0805,
 Starlite 0908,
 Star sight 0008,
 Supra 0002, 0809,
 Superscan 0812, 0509, 0247,
 Supremacy 0096,
 Supreme 0019,
 Sva 0801,
 Sva 0223, 0822,
 Sylvania 0807, 0002, 0502, 0115, 0520, 0919, 1715, 0324,
 0247, 0447, 0402, 0408, 0109, 0715, 0717,
 Symphonic 0506, 0520, 0324, 0247, 0004,
 Syntax 1304, 1615, 1815,
 Tandy 0603,
 Tatung 0709, 0421, 0901,
 Technics 0007,
 Techwood 0002, 0502, 0007,
 Teknika 0704, 0002, 0102, 0502, 0706, 0906, 0112, 0512,
 0618, 0601, 0019, 0701, 0402, 0802, 0805,
 0313,
 Telecaption 0313,
 Telerent 0704, 0601, 0701,
 Tera 0002, 0220,
 Tevion 0421,
 Tevion 0002, 0502,
 Toshiba 0517, 0419, 0512, 0613, 0719, 0112, 0506, 0111,
 0715,
 0618, 0627, 0437, 0041, 0094, 0802, 0111, 0313,
 Trutech 1504, 1116, 1713,
 Universal 0806, 0310,
 Victor 0607,
 Vidtech 0002, 0102, 0502,
 Viewsonic 0206, 0808, 1003, 1016,
 Viking 0019,
 Viore 1403,
 Vizio 0709, 1702,
 Wards 0704, 0807, 0002, 0102, 0502, 0706, 0601, 0408,
 0109, 0310, 0111, 0513, 0806, 0701, 0402, 0004,
 Westinghouse 0915, 0013, 1216, 0300,
 White westinghouse 0611, 0614, 0415, 0215, 1402, 0324, 0529, 0609,
 Yamaha 0618, 0002, 0102, 0502,
 Zenith 0713, 0502, 0606, 0409, 0710, 0415, 0507, 0714,
 0405, 0712, 0015, 0916, 0008, 0002, 0115, 0224,
 0324, 0126, 0326, 0826, 0228, 0430, 0632, 0043,
 0437, 0903, 0505, 0701, 0407,