

## 301 SERIES

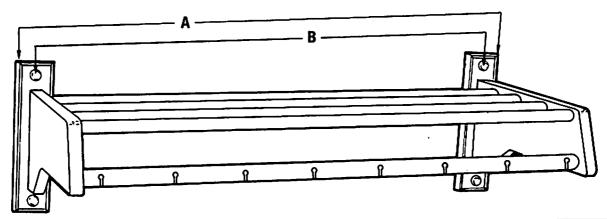



MODEL NO.	SIZE	A	В	MIN. CLOSET WIDTH	MIN. ALCOVE WIDTH*
CP30124	24"	25½"	23¼"	27¾"	26"
CP30130	30°	31½"	29¼"	331/4"	32"
CP30136	36"	37½"	35¼"	39%"	38"
CP30142	42"	43½"	41¼"	45"	44"
CP30148	48"	49½"	47¼"	51"	50"

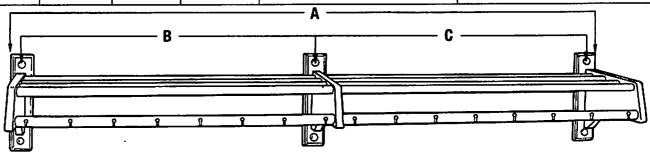


MODEL NO.	SIZE	Α	В	C	MIN. CLOSET WIDTH	MIN. ALCOVE WIDTH*
CP30160	60"	61¼"	29%"	29%"	62¼"	61¾"
CP30172	72"	73¼"	35%"	35%"	74¼"	73¾"
84" and 96" sizes available upon	84" 96"	85¼" 97¼"	41%" 47%"	41%" 47%"	86¼" 98¼"	85¾" 97¾"
request.	30	31/4	77/8	4,78		0.7-

<sup>\*</sup>The entrance of the alcove must be the same width as the interior.

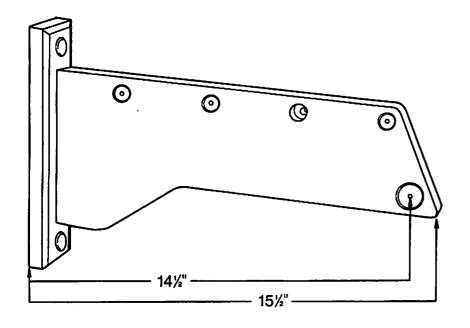

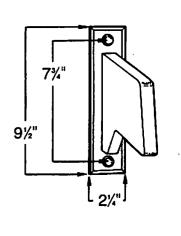

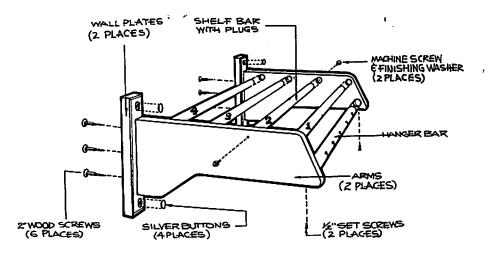

## NO.301 SERIES

- 1) Screw wall plates onto arms using three 2" wood screws for each arm.
- 2) Lay the left hand arm on its' side. Select the shelf bar which contains the plugs and insert it into position #2. Insert the 3 remaining shelf bars and hanger bar. Be sure the hanger bar is positioned as illustrated above.
- 3) Being VERY CAREFUL not to scratch finish, insert right hand arm onto the shelf and hanger bars.
- 4) Secure the #2 shelf bar to each arm with the two %" machine screws and finishing washers.
- 5) Insert the hanger bar set screws. Be sure the hanger bar is positioned so that the set screws will enter the bottom slot of the hanger bar.
- 6) After mounting assembled unit on wall, insert silver buttons into top and bottom holes on wall plates.
- 7) If hangers do not slide freely in hanger bar, check bottom slot for a restricted area. Insert screwdriver into restricted area and carefully rotate screwdriver just enough to widen restriction.