



Assembly and Installation Booklet **For Headboards, Media Panels, Mirrors and LED Lighting**



Headboard, Media Panel, Mirror, LED Lighting Installation



DISCLAIMER:


Building construction varies from area to area and property to property.

Hardware needed to attach this product to the wall will vary based on wall density and wall materials used.

It is the responsibility of the property owner and the installers to determine the proper hardware type and provide the appropriate wall fasteners


Preparation

1. Lay the components to be installed - on a flat work surface as shown.

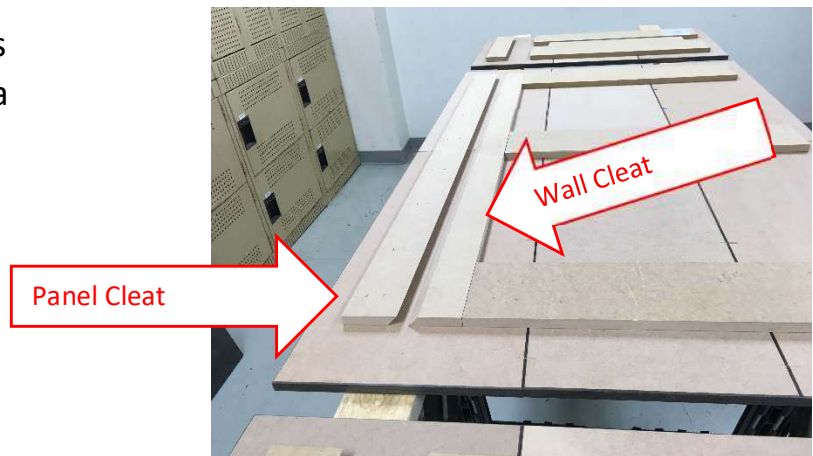

2. Be certain that the **Panel Cleats** are all on the same side of the work area.

Also – identify the **Wall Cleats** that are pinned in place for shipping.

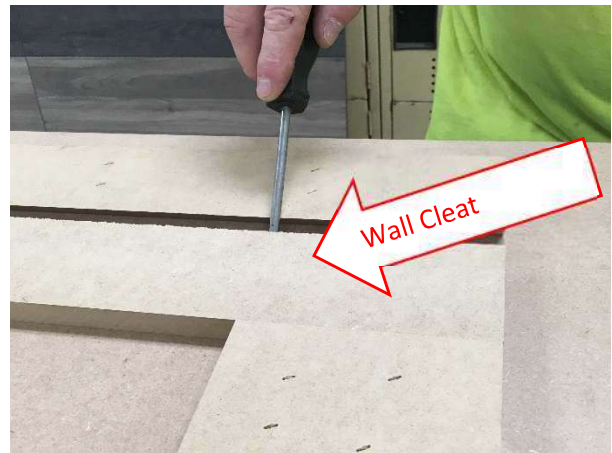

3. The **Wall Cleats** are held in place by small pins for shipping.

Simply pry them off with a small screw driver as shown.




Determining Proper Headboard Height

4. Typically - the **Headboard** is located 2-3" below the top of the mattress.



5. **Wall Guards** work best when located below the top of the nightstand.


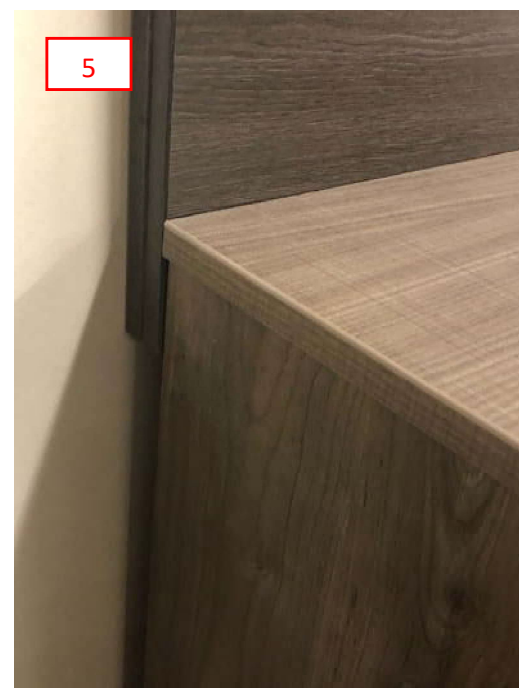


- Secure the **Wall Cleats** to the wall – with the bottom edge approximately 7-1/4" below the desired location of the top of the unit.

Wall types and construction methods vary from property to property and wall to wall.

Be certain to use the appropriate fastener method for the particular wall construction.

The assembled units are heavy so make certain the bolts or anchors are tight and secure.

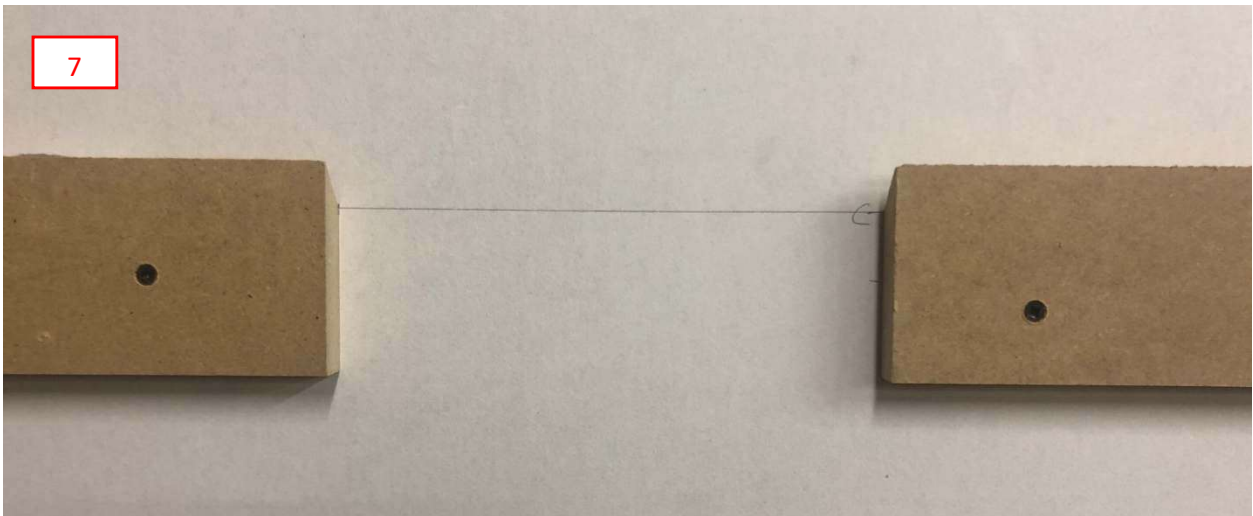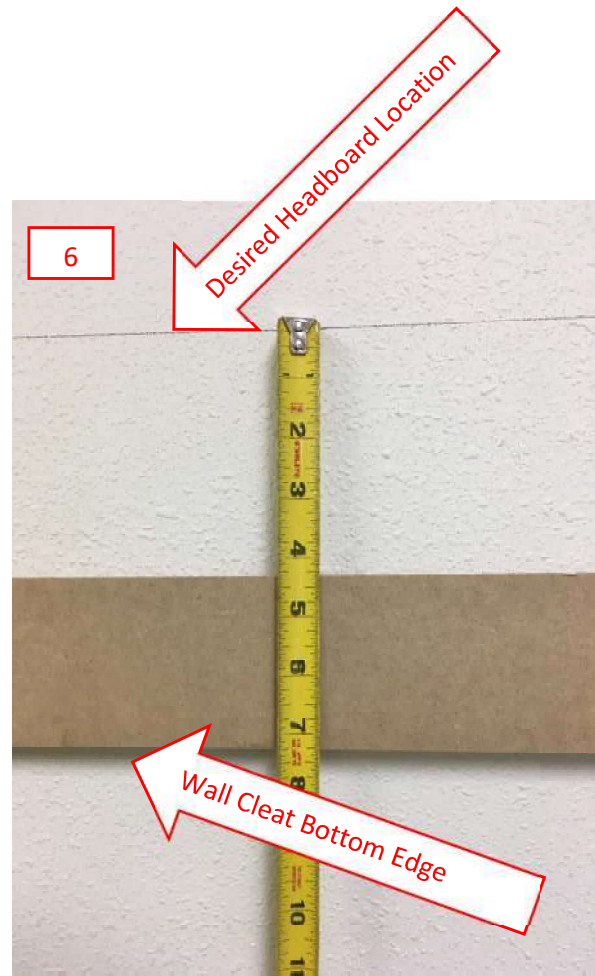

- Place a level on the **Wall Cleats** to make certain the elevation is straight – and the **Wall Guards** are in line with the **Headboard**.

LED Lighting Installation

8. If you are installing **LED** lighting – to the **Headboard** – now is the time to install the **LED Ribbon** – and plug into the **Switch** cord.



Placement

9. Carefully place the **Headboard** onto the **Wall Cleat**




10. Repeat this process for the **Wall Guards**




Fine Tuning and Adjustments

11. Occasionally gaps between the **Headboard** and **Wall Guard** need to be adjusted

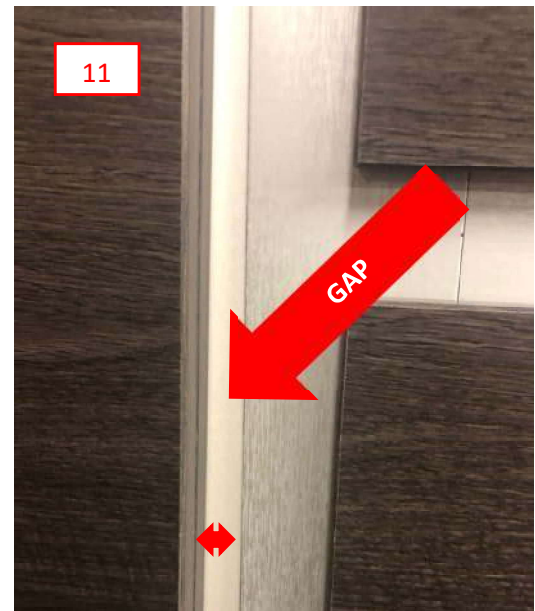

12. To complete the placement process – simply adjust the **Wall Guard** to close the gap – and run a screw through the **Bottom Cleat** – into the predetermined wall stud

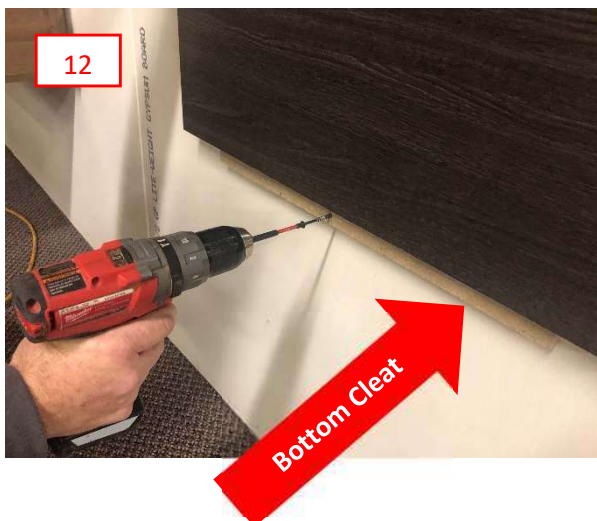

13. Plug the LED switch (bottom of the headboard) – into the Power Supply



Media Panel and Mirror Installation

Follow Steps 3 – 6 – 7 – 9 Above



